


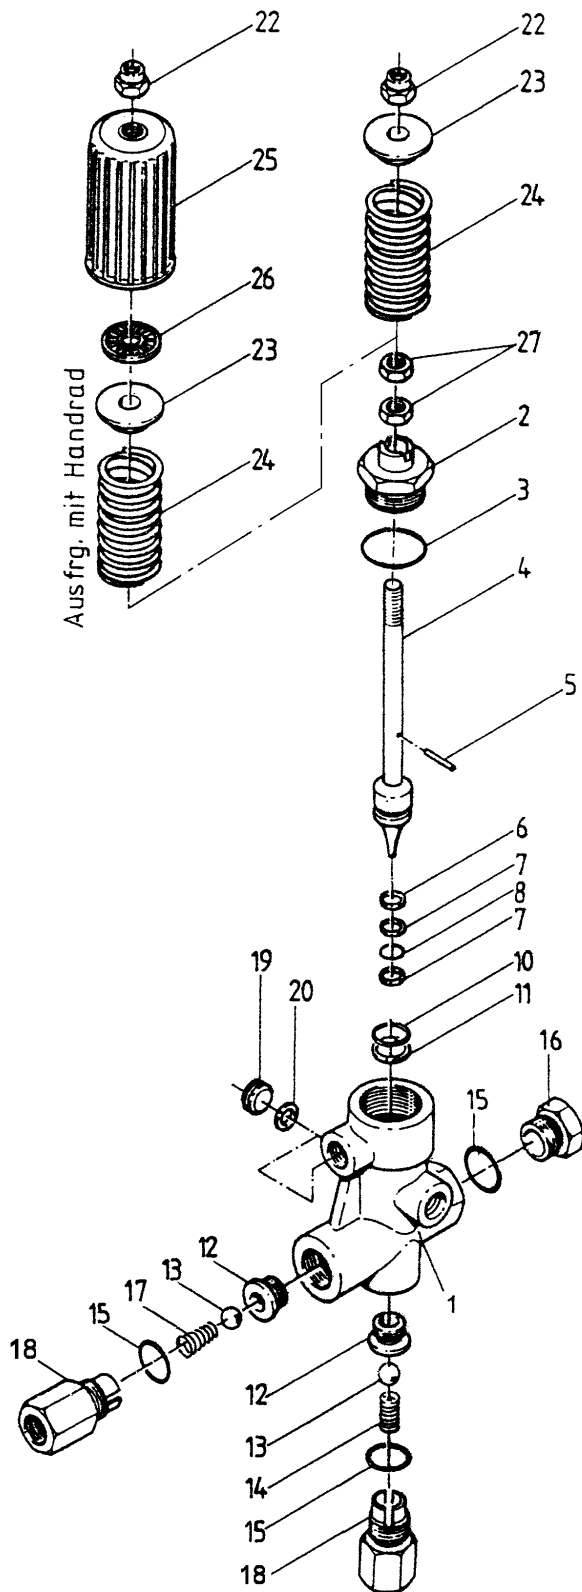

Lfd. Nr. Item No.	Stück No.	Best.-Nr. Code No.	Benennung	Description
1	1	01.0402	Gehäuse	Casing
02	1	07.1549	Führungsstopfen	Guide Plug
03	1	06.0067	O-Ring	O-Ring
04	1	11.0378	Kolbenstange	Piston Rod
05	1	07.1558	Knebelkerbstift	Lock Pin
06	1	07.1875	Führungsring	Guide Ring
07	2	06.0246	Stützring	Support Ring
08	1	06.1161	O-Ring	O-Ring
10	1	06.0499	O-Ring	O-Ring
11	1	06.0498	Stützring für O-Ring	Support Ring for O-Ring
12	2	07.1553	Bypassventilsitz	Bypass Valve Seat
13	2	07.0629	Bypassventilkugel	Bypass Valve Ball
14	1	07.2571	Bypassventilfeder	Bypass Valve Spring
15	3	06.0244	O-Ring	O-Ring
16	1	07.1557	Bypassventilstopfen	Bypass Valve Plug
17	1	07.1554	Rückschlag-ventilfeder	Kick-Back Valve Spring
18	2	07.1907	Anschlußstutzen G3/8 IG	Connecting Branch G3/8 Inner Thread
19	2	07.3808	Stopfen	Plug
20	2	06.0742	Cu-Dichtring	Copper Seal
22	1	07.1889	Sechskantmutter	Hexagon Nut
23	1	07.1560	Zentrierscheibe	Centring Disc
24	1	07.3035	Druckfeder grau	Pressure Spring grey
25	1	07.1822	Handrad	Hand Wheel
26	1	05.0123	Axial-Nadelkranz	Axial Needle Bearing
27	2	07.1880	Anschlagmutter	Stop Nut
•		14.0608	Rep. Satz	Repair Kit
0		00.3986	Steuerkolben kpl.	Piston Unit